

## WH 型液动换向阀 Directional control valve, hydraulic operated

### ■ 选购指南 How to order



4WH	-	10	-	-	16
系列号 Series	28MPa= 无标记 No code 35MPa=H- (通径 10 无此项) Not for size 10	通径: 10=10 size 16=16 25=25 32=32	弹簧对中或复位 = 无标记 No code=spring centering or offset 液压对中或复位 =H Hydraulic centering or offset (通径 10 仅 C,D,K,Z,Y 可带 H) For size 10, only C,D,K,Z,Y with H	机能符号 见 55 页 Symbol see page 55	20 系列(通径 size 10)=20 50 系列(通径 size 16,25,32)=50

/-	/-	-	*
无标记 = 不带换向时间调节器 Without shifting time adjustment S= 带换向时间调节器, 进口节流 Shifting time adjustment as meter-in control S2= 带换向时间调节器, 出口节流 Shifting time adjustment as meter-out control	附加装置号(见 WEH) Additional device code (see WEH) (通径 10 无此项) Not for size 10	无代号 = 矿物油 None=Mineral oil V= 磷酸酯油 V=Phosphate- ester	其它细节用文字说明 Further detail in clear text

注: 供排形式均为外供外排。Note: Pilot oil supply external, pilot oil drain external.